RemPhos | LINEAR BARKIT [INTERNAL DRIVER]

How do you LBI?



CONTINUOUS RUN (SUSPENDED MOUNT)*



SUSPENDED IN-LINE BRKT + SEAMLESS CONNECTOR

COVE LIGHTING*



45 DEGREE BRKT/CLIP + SEAMLESS CONNECTOR + LINKING CABLE







OC2 SENSOR + SEAMLESS CONNECTOR



CONTINUOUS RUN (T-GRID)*



SEAMLESS CONNECTOR + T-BAR CLIP

^{*} ONE INCOMING POWER KIT IS REQUIRED PER CONTINUOUS RUN OF LBI (RP-LBI-G1-IP-3F-DIM). USED TO HARD WIRE THE INCOMING POWER CABLE INTO FIXTURE OR J-BOX. (SEE PAGE 2 FOR PHOTO AND WHAT'S INCLUDED IN THE KIT)

RemPhos LINEAR BARKIT [INTERNAL DRIVER]



SEAMLESS CONNECTOR + LINKING CABLE



SIGN LIGHTING* LINKING CABLE



UNDER CABINET 2FT INCOMING POWER CABLE W/ SWITCH





STAIRWELL* OC2 SENSOR + JUNCTION BOX



DISPLAY CASES* 45 DEGREE BRACKET

 


SCAN FOR A FULL LIST OF LBI ACCESSORIES











SERVICE DISCONNECT O GROMMET



^{*} ONE KIT IS REQUIRED PER CONTINUOUS RUN OF LBI (RP-LBI-G1-IP-3F-DIM). USED TO HARD WIRE THE INCOMING POWER CABLE INTO FIXTURE OR J-BOX.