


PRIOR TO INSTALLATION, PLEASE READ THE ENTIRE INSTALLATION INSTRUCTIONS

WARNING

TURN OFF POWER SUPPLY BEFORE INSTALLATION OR BEFORE DOING ANY MAINTENANCE WORK.

CLEAN THE LUMINAIRE REGULARLY IF USING IN HEAVY DUST OR OIL/GAS AREAS.

KEEP PIR SENSOR AWAY FROM LARGE AREAS OF METAL AND GAS REFLECTORS.


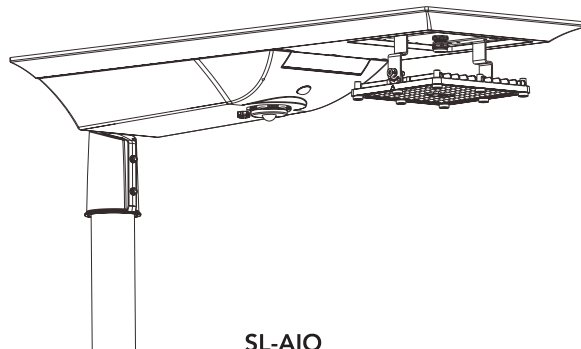


SL-AIO



INSTALLATION - POST TOP MOUNTING

1. ✖

40L


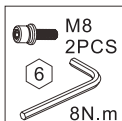
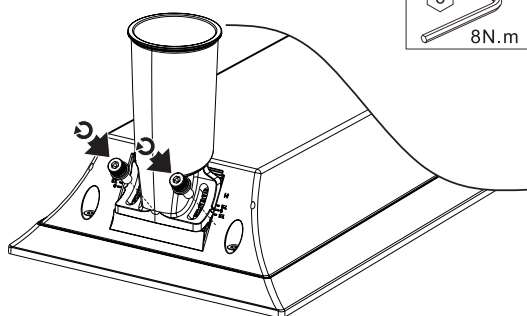


70L


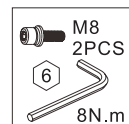
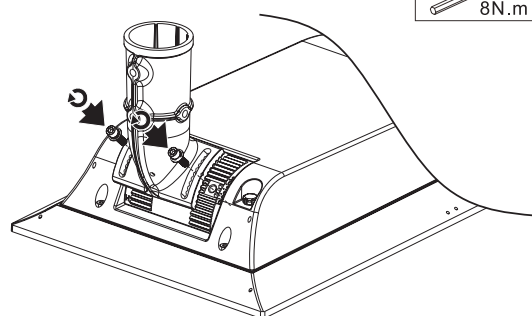


2. ✖

40L

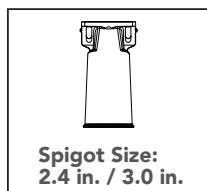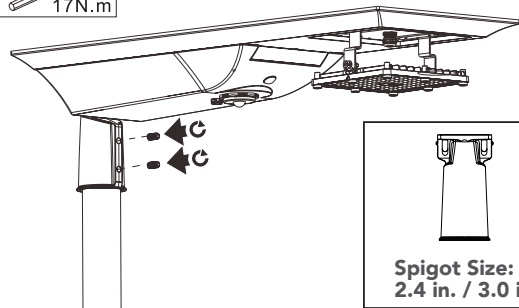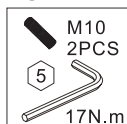


70L

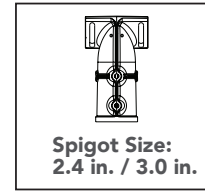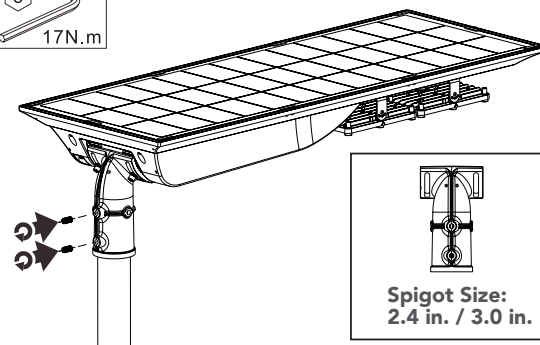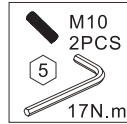


INSTALLATION - SIDE ENTRY MOUNTING

1.

40L

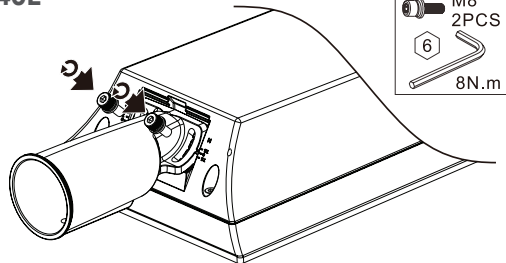


70L

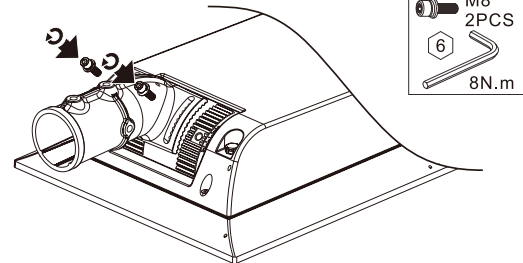


2.

40L


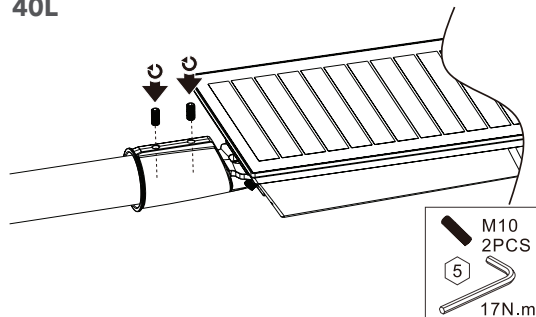


70L

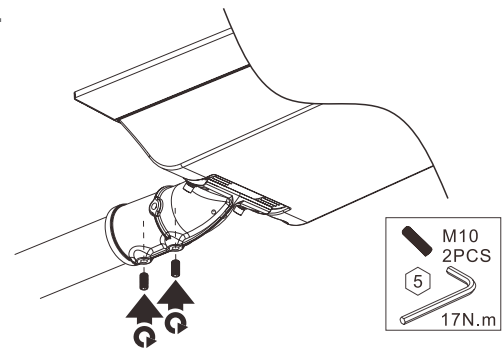



ROTATABLE ANGLE (40L) - POST TOP MOUNTING

Please select the desired angle before tightening the screws

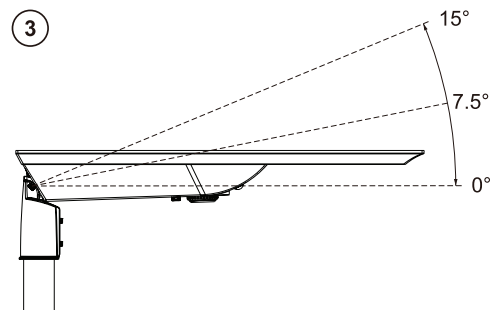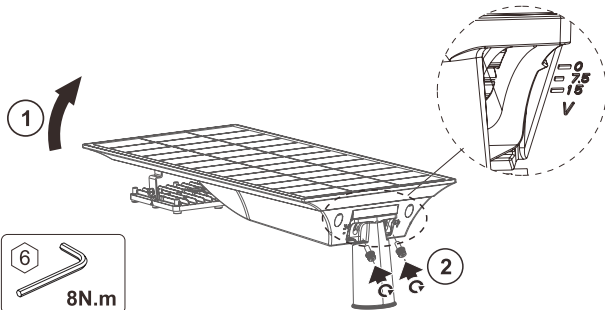


ROTATABLE ANGLE (40L) - SIDE ENTRY MOUNTING

Please select the desired angle before tightening the screws

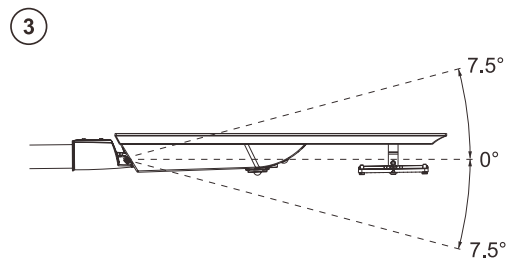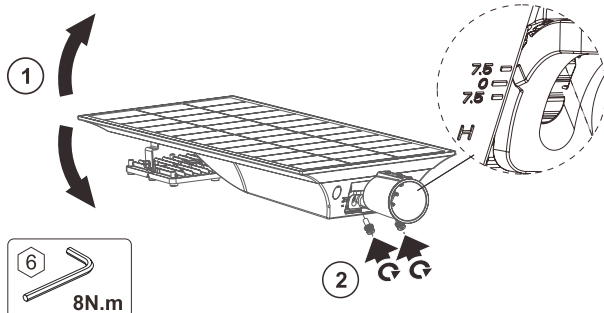


ROTATABLE ANGLE (70L) - POST TOP MOUNTING

Please select the desired angle before tightening the screws

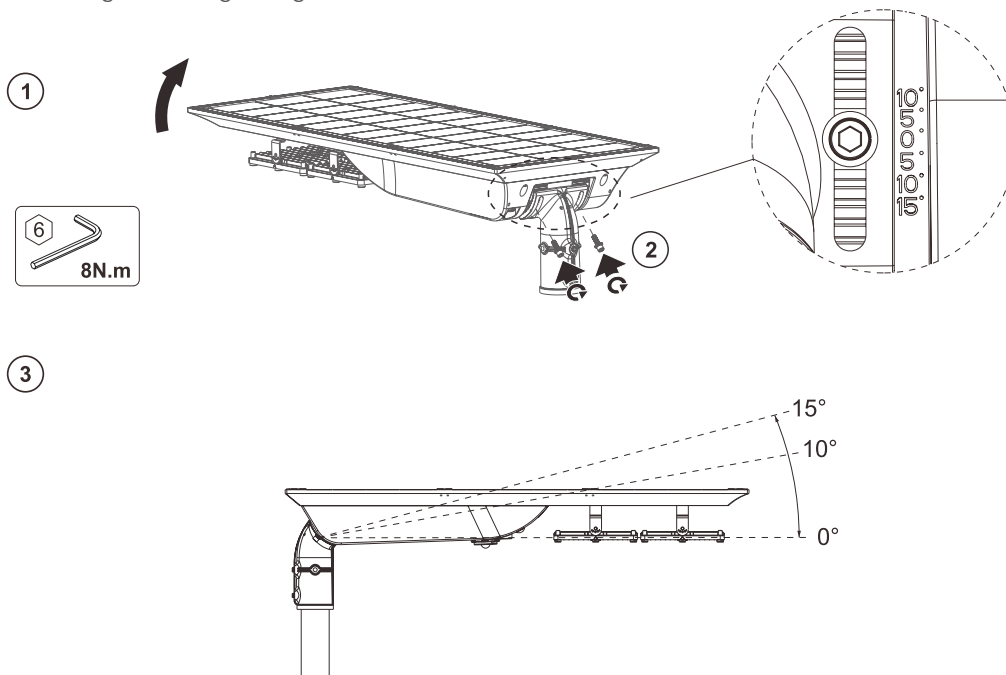


ROTATABLE ANGLE (70L) - SIDE ENTRY MOUNTING

Please select the desired angle before tightening the screws

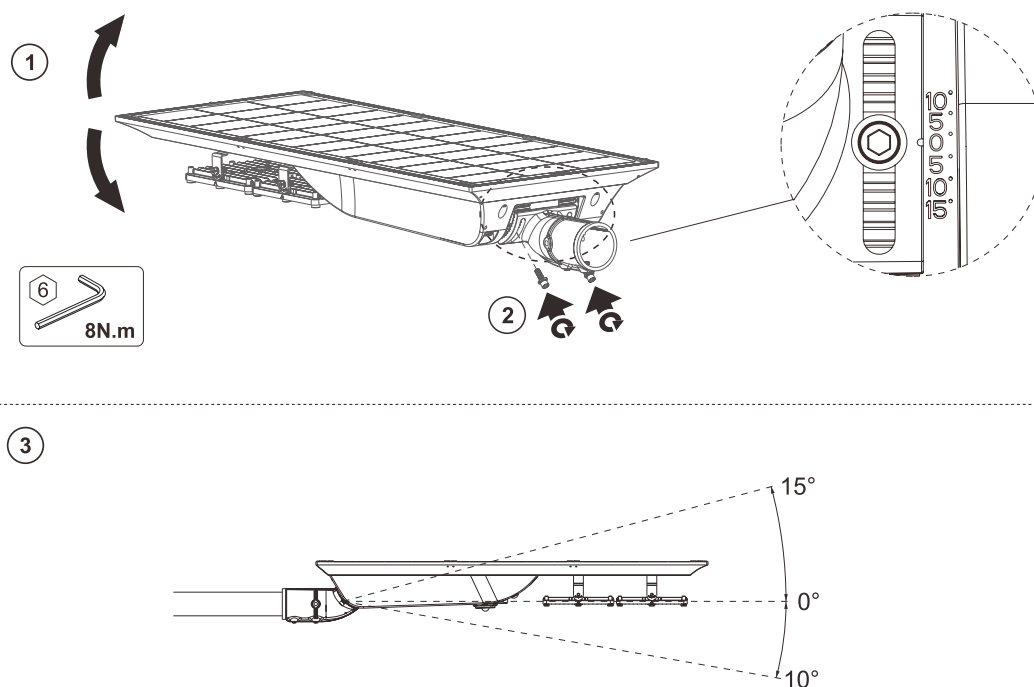


SWITCH


Press the switch and wait 10 seconds for the light to turn on.

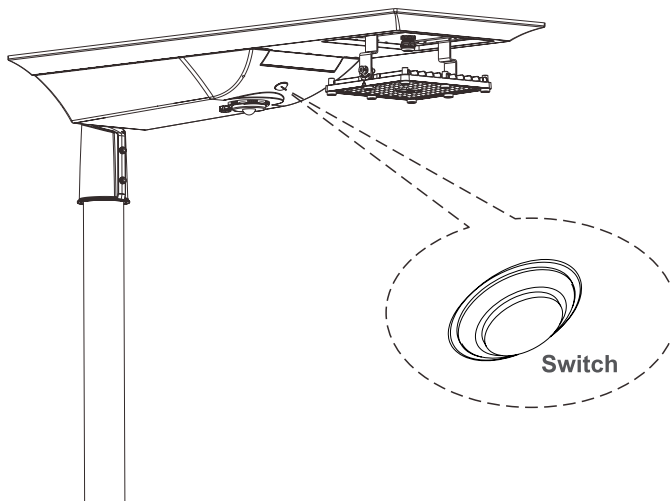

PIR MOTION SENSOR

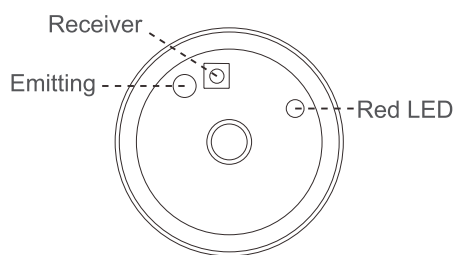

1. Sensing distance

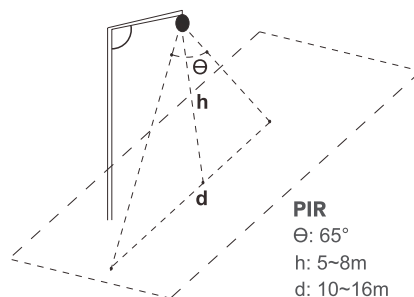


2. PIR sensor indicator status (Red LED)

Controller Status	Indicator status
Normal charging	1s cycle flashing
Normal working	ON
Alarm message exists	0.5s cycle flashing
Machine standby	2s cycle flashing

FUNCTION (PLEASE REFER TO ACTUAL MODEL)

Adjustable Moudule (Optional)

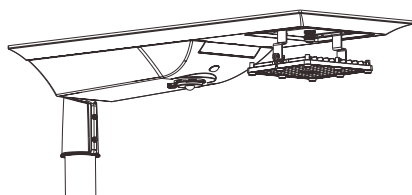

The Mounting Options of Adjustable Module is same like normal version.

